'Click' to download complete Manual

Col ER
C2050/2020
iR C2100/2100S
SERVICE HANDBOOK

REVISION 0

Canon

NOV. 2000 FY8-23B9-000

COPYRIGHT© 2000 CANON INC. CANON C2050/2020, C2100/2100S REV.0 NOV. 2000 PRINTED IN JAPAN (IMPRIME AU JAPON)

Application

This manual has been issued by Canon Inc. for qualified persons to learn technical theory, installation, maintenance, and repair of products. This manual covers all localities where the products are sold. For this reason, there may be information in this manual that does not apply to your locality.

Corrections

This manual may contain technical inaccuracies or typographical errors due to improvements or changes in products. When changes occur in applicable products or in the contents of this manual, Canon will release technical information as the need arises. In the event of major changes in the contents of this manual over a long or short period, Canon will issue a new edition of this manual.

The following paragraph does not apply to any countries where such provisions are inconsistent with local law.

Trademarks

The product names and company names used in this manual are the registered trademarks of the individual companies.

service-repairmanual.com

Copyright

This manual is copyrighted with all rights reserved. Under the copyright laws, this manual may not be copied, reproduced or translated into another language, in whole or in part, without the written consent of Canon Inc.

COPYRIGHT © 2000 CANON INC.

Printed in Japan

Imprimé au Japon

Caution

Use of this manual should be strictly supervised to avoid disclosure of confidential information.

1 Symbols Used

This documentation uses the following symbols to indicate special information:

Symbol	Description
	Indicates an item of a non-specific nature, possibly classified as Note, Caution, or Warning.
	Indicates an item requiring care to avoid electric shocks.
	Indicates an item requiring care to avoid combustion (fire).
	Indicates an item prohibiting disassembly to avoid electric shocks or problems.
	Indicates an item requiring disconnection of the power plug from the electric outlet.
Memo	Indicates an item intended to provide notes assisting the understanding of the topic in question.
REF.	Indicates an item of reference assisting the understanding of the topic in question.
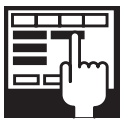	Provides a description of a service mode.
	Provides a description of the nature of an error indication.
	Refers to the Copier Basics Series for a better understanding of the contents.

service-repairmanual.com

service-repairmanual.com

Contents (Reader Unit)

CHAPTER 1 MAINTENANCE AND INSPECTION

1 Periodically Replaced Parts 1-1
2 Consumables and Durables 1-1
3 Scheduled Servicing 1-2
4 Scheduled Servicing Chart 1-4

CHAPTER 2 STANDARDS AND ADJUSTMENTS

1 Adjusting the Image Position 2-1
1.1 Standards 2-1
1.2 Checking the Image Position 2-1
2 Making Scanner-Related Adjustments 2-2
2.1 Routing the Scanner Drive Cable 2-2
2.2 Adjusting the Intensity of the Scanning Lamp 2-3
2.3 After Replacing the Scanning Lamp 2-4
2.4 Mounting Back the Existing Scanning Lamp 2-4
2.5 Keeping the Reader Unit Level 2-5
2.6 After Replacing the Standard White Plate 2-6
3 Adjusting Other Electrical Parts 2-7
3.1 When Replacing the CCD Unit 2-7
3.2 When Replacing the Reader Controller PCB 2-8
3.3 When Replacing the AP-IP PCB 2-9
3.4 When Replacing the ECO PCB 2-9
3.5 When Replacing the Light Intensity Detection PCB 2-9
4 Checking the Photointerrupters 2-10
5 Upgrading the Machine 2-12
5.1 Replacing the DIMM 2-12
5.1.1 Removing the DIMM from the Reader Controller PCB 2-13
5.1.2 Mounting the DIMM on the Reader Controller PCB 2-14
5.2 Downloading 2-15
5.2.1 Making Preparations 2-15
5.2.2 Downloading Procedure 2-15

CHAPTER 3 ARRANGEMENT AND FUNCTIONS OF ELECTRICAL PARTS

1 Variable Resistors, Light-Emitting Diodes, and Check Pins by PCB 3-6

service-repairmanual.com

APPENDIX

1 General Timing Chart A-1
2 Signals and Abbreviations A-3
2.1 Signals A-3
2.2 Abbreviations A-4
3 Special Tools A-4
4 Solvents and Oils A-4
5 Reader Unit General Timing Diagram A-5

service-repairmanual.com

Contents (Printer Unit)

CHAPTER 1 MAINTENANCE AND INSPECTION

1 Periodically Replaced Parts 1-1
2 Consumables and Durables 1-2
2.1 Printer Unit 1-2
2.2 Cassette Pedestal 1-3
3 Scheduled Servicing 1-4
4 Scheduled Servicing Chart 1-6

CHAPTER 2 STANDARDS AND ADJUSTMENTS

1 Adjusting the Image Position 2-1
1.1 Standards for Image Position 2-1
1.2 Checking the Position of the Image 2-2
1.3 Adjusting the Left/Right Image Margin 2-3
1.4 Adjusting the Leading Edge Margin 2-7
1.5 Adjusting the Left/Right Non-Image Width 2-7
1.6 Leading Edge Non-Image Width 2-7
2 Image Formation System-Related Adjustments 2-8
2.1 Points to Note When Handling the Drum Unit 2-8
2.2 After Replacing the Drum Unit 2-8
2.3 After Replacing the Transfer Belt 2-9
3 Pickup/Feed System-Related Adjustments 2-10
3.1 Attaching the Timing Belt for the Manual Feed Tray Assembly 2-10
3.2 Executing Paper Width Reference Point Auto Adjustment for the Manual Feed Tray 2-11
3.3 Adjusting the Paper Width Basic Value for the Manual Feed Tray 2-11
4 Fixing System-Related Adjustments 2-12
4.1 When Replacing the Web 2-12
4.2 Adjusting the Nip 2-13
4.3 Removing the Skew 2-15
4.4 When Replacing the Fixing Roller 2-16
5 LED Exposure Unit-Related Adjustments 2-17
5.1 Points to Note When Handling the LED Exposure Unit 2-17
5.2 Points to Note When Mounting the LED Exposure Unit 2-18
5.3 After Replacing the LED Exposure Unit 2-18
5.4 Claening the LED Exposure Unit (if image faults, e.g., light images, uneven images, occur as the result of dirt on the lens surface) 2-18
6 Adjusting Other Electric Parts 2-19
6.1 When Replacing the System Controller PCB 2-19
6.2 When Replacing the DC Controller PCB 2-20
6.3 Checking the Environment Measurement PCB 2-22
6.4 Checking the Photointerrupters 2-24
7 Upgrading 2-28
7.1 Replacing the DIMM 2-28

service-repairmanual.com

7.1.1 Removing the DIMM 2-29
7.1.2 Mounting the DIMM of the System Controller PCB and the DC Controller PCB 2-32
7.2 Downloading 2-33
7.2.1 Items to Prepare 2-33
7.2.2 Downloading Procedure 2-33

CHAPTER 3 ARRANGEMENT AND FUNCTIONS OF ELECTRICAL PARTS

1 Sensors 3-2
2 Thermistor, Lamps, and Heaters 3-5
3 Clutches and Solenoids 3-8
4 Fans 3-10
5 Motors 3-12
6 PCBs 3-14
7 Cassette Pedestal 3-16
8 Variable Resistors (VR), Light-Emitting Diodes, and Check Pins by PCB 3-18
8.1 Controller PCB 3-19
8.2 System Controller PCB 3-20
8.3 Serial Driver PCB 3-21
8.4 DC Power Supply PCB 3-21
8.5 Pickup Assembly PCB 3-22
8.6 Duplex Driver PCB (duplex model only) 3-23
8.7 Cassette Pedestal 3-23

APPENDIX

1 General Timing Chart A-1
2 Signals and Abbreviations A-3
2.1 Signals A-3
2.1.1 Printer A-3
2.1.2 Cassette Pedestal A-9
2.2 Abbreviations A-9
3 Printer Unit General Circuit Diagram A-11
4 Cassette Pedestal General Circuit Diagram A-13
5 Special Tools A-15
6 Solvents and Oils A-17

service-repairmanual.com

Contents (Service Mode)

1 Outline S-1
1.1 Construction of Service Mode ... S-1
1.2 Starting the Service Mode S-3
1.3 Ending the Service Mode S-4
1.4 Backing Up the Service Mode ... S-4
1.5 Basic Operation S-5
1.5.1 Initial Screen S-5
1.5.2 Level 1/Level 2 screen S-5
1.5.3 Level 3 Screen S-6
2 DISPLAY (status indication mode) S-7
2.1 COPIER/PRINTER S-7
2.2 FEEDER S-26
2.3 EDITOR S-26
3 I/O (I/O display mode) S-27
3.1 DC-CON S-28
3.2 R-CON S-34
3.3 IP S-35
3.4 S-CON S-36
3.5 FEEDER S-38
3.6 COPIER S-40
4 Adjustment Mode (ADJUST) S-50
4.1 COPIER/PRINTER S-50
4.2 FEEDER S-76
5 Operation/Inspection Mode (FUNCTION) S-77
5.1 COPIER/PRINTER S-77
5.2 FEEDER>FUNCTION S-92
6 OPTION (settings mode) S-93
6.1 COPIER/PRINTER S-93
6.2 FEEDER S-108
6.3 SORTER S-108
7 TEST (test print mode) S-109
8 COUNTER (counter mode) S-113

service-repairmanual.com

Contents (Error Code)

1 Self Diagnosis (copier) E-1
2 Self Diagnosis O (DADF) E-13
3 Self Diagnosis (finisher) E-16
3.1 Finisher Assembly E-16
3.2 Saddle Stitcher E-19
4 Self Diagnosis (sorter) E-23
5 Self Diagnosis (PDL Board) E-25

service-repairmanual.com